

## SENSITIVITY ADJUSTMENT


Remove cover on front of control box (Insert a screwdriver into slot at bottom of cover and bend gently downwards.)

Disengage door by moving the “Manual Release Lever”. Manually extend the door to the halfway position and re-engage door.

Press the large “aqua” coloured button on the front of the control box and hold the bottom rail of the door to prevent it from travelling up. The door should *overload* and stop. If the door starts to travel downwards, swap over the “Motor Spade Connectors” and readjust “Limit Cams”.

Press the small black button and then *press* the large “aqua” button on the front of the control box. The door should now go through four cycles (up and down) and the light will come on for the “overload alert” indication that the sensitivity adjustment is complete.

Replace front cover.

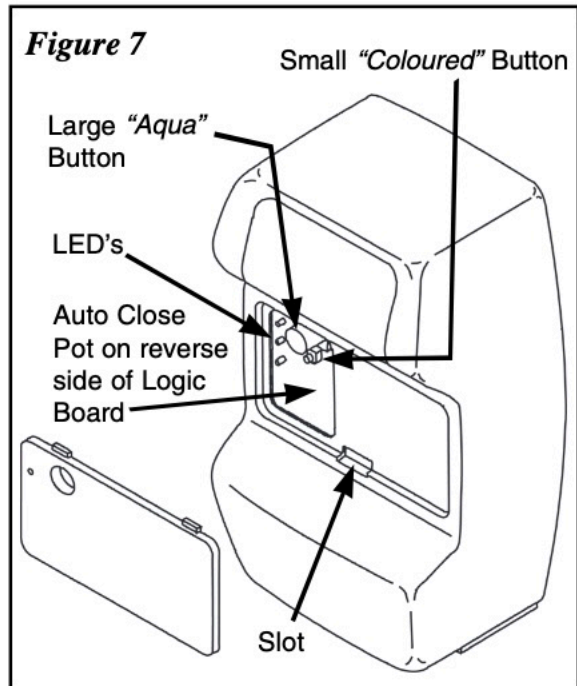

## AUTO CLOSE OPTION

\*Note: Manual Release Lever Protection is always disabled when the door is in the auto close mode.