



BOSS  
GARAGE DOOR  
OPERATORS

The Boss Force Limit adjustment is in a little hole on the front cover and turns

310Mhz  
Old  
Type

The force adjustment for Steel-Line is under the light cover and turns anti clockwise to give it more force