

Universal Receiver RXU- 5

Connections

- Input - 12 ~ 24 Volt AC/DC (DC connection is non polarized)
- Output - 2 x Normally Open (NO 1 & 2) dry contacts and 2 x Normally Closed (NC 1 & 2) dry contacts
- Coaxial Antenna - ANT SIG (inner wire) and ANT GND (outer mesh)

Transmitter Coding

- Channel 1
 - Momentarily press Learn Button ~ LED paused 1 x flash
 - Momentarily press transmitter button ~ LED extinguish
 - Momentarily press same transmitter button again ~ LED rapid flash then extinguish
 - Coding complete
- Channel 2
 - Momentarily press Learn Button twice ~ LED paused 2 x flash
 - Momentarily press transmitter button ~ LED extinguish
 - Momentarily press same transmitter button again ~ LED rapid flash then extinguish
 - Coding complete
- Channels 1 & 2 Together
 - Momentarily press Learn Button three times ~ LED paused 3 x flash
 - Momentarily press transmitter button ~ LED extinguish
 - Momentarily press same transmitter button again ~ LED rapid flash then extinguish
 - Coding complete
- Notes;
 1. Max No. of transmitter codes -- 30
 2. If 30 transmitters are already programmed then attempt to code transmitter No.31 will be rejected

Transmitter Deleting

- Press and hold down Learn Button for 6 sec ~ LED rapid flash then extinguish
- Deleting complete

