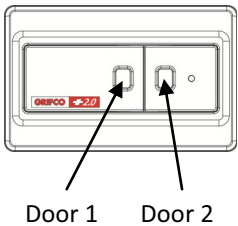
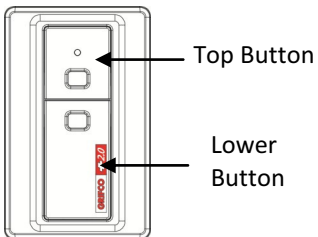



AUTO CLOSE & WIRELESS ACCESSORY SET UP

NOTE: Radio Lock jumper (if fitted) must be removed from the MCB before wireless accessories can be learnt. Ref page 17.
For security reasons the Radio Lock should be refitted after the wireless learn sequence is completed.

| Action | Button Sequence |
|---|---|
| LEARNING A NEW WIRELESS ACCESSORY FROM THE CONTROLLER | <ul style="list-style-type: none"> Press and hold the SET button, then whilst holding press STOP 5 times (green status light will light then continue flashing. Indicating learn mode) Press the desired WIRELESS ACCESSORY BUTTON to learn (orange limit light will flash fast after each wireless accessory is successfully learnt) Press STOP to exit learn mode |
| LEARNING A NEW WIRELESS ACCESSORY FROM THE MCB | <ul style="list-style-type: none"> Press the LRN button (green status light will light then continue flashing, indicating learn mode) Press the desired WIRELESS ACCESSORY BUTTON to learn (orange limit light will flash fast after each wireless accessory is successfully learnt) Press LRN button again to exit learn mode |
| ERASE ALL LEARNED WIRELESS ACCESSORIES FROM THE CONTROLLER | <ul style="list-style-type: none"> Press and hold the SET button, then whilst holding Press the STOP button 4 times, holding on the fourth press for 5 seconds (green light will flash 5 times, then fast flash to indicate completion) Check that previously learned wireless accessories no longer work |
| <p>LEARN THE E138G WIRELESS WALL CONTROL FROM THE CONTROLLER</p>   | <p>The E138G can be used as a two channel wireless wall control for use on one or two doors, or as a dedicated up/down wireless wall control. In either application for the door to latch down an Entrapment Protection Device must be installed. Without Entrapment Protection in two channel configuration the wall control will function as an open/stop device only and in dedicated up/down configuration the down button will operate as “hold to close” only.</p> <p>Two Channel Wireless Wall Control</p> <ul style="list-style-type: none"> Press and hold the SET button, then whilst holding press STOP 5 times (green status light will light then continue flashing. Indicating learn mode) Press the desired WIRELESS ACCESSORY BUTTON to learn door 1 (orange limit light will flash fast after each wireless accessory is successfully learnt) Repeat previous step to learn door 2 (if required) Press STOP to exit learn mode <p>Dedicated Up/Down Wireless Wall Control</p> <ul style="list-style-type: none"> Press and hold the SET button, then whilst holding press STOP 5 times (green status light will light then continue flashing. Indicating learn mode) Press the E138G TOP button (the orange LIMIT ERROR light will flash at each button press) Then press the E138G LOWER button Press the STOP button on the GRIFCO® controller (the green light will continue to flash) Press the E138G LOWER button again (the green light will go out indicating exit of learn mode) |
| <p>LEARN THE E840G WIRELESS KEYPAD FROM THE CONTROLLER</p>  | <ul style="list-style-type: none"> Press and hold the SET button on the GRIFCO® controller, then While holding the SET button, press the STOP button 5 times (the green status light will light then continue flashing, indicating learn mode) Enter a 4-digit PIN code into the keypad (step 3) Press the ENTER button (step 4) (orange LED flickers on controller) To enter additional PIN codes (up to 12) repeat steps 3 & 4 Press STOP to exit learn mode Install the RADIO LOCK button on the MCB to prevent any further wireless accessories being learnt, or erased without authority <p>NOTE: The Grifco® Security + 2.0 Wireless Keypad provides :</p> <ul style="list-style-type: none"> Wireless security access Wireless hold to close |