



TECHNICAL BULLETIN

Set Door Travel Limits


GTS 2000™ Tilt and Sectional Door Automatic Operator

TB-SDROCGN0906- GTS 2000™

Issue Date: October 2006

Set these up using the remotes as it is easiest way to do it as the motor itself only has 2 buttons

Set at power head

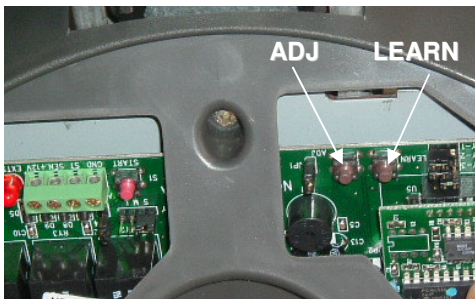


Title: GTS 2000™ SET DOOR TRAVEL LIMITS

The limits can be set directly on the power head, or by using the handset (transmitter)

1. Carefully remove the light cover by pulling down on tab at front of unit
2. Press and hold learn button (S3) for 3 seconds to begin limit setting mode. Unit will beep 3 times
3. Press and hold ADJ button (S2) until door travels to the desired open position (if the door is already open proceed to the next step).
4. Press LEARN button (S3) once to confirm this position. Unit will beep twice to confirm the top position is set.
5. Press and hold ADJ button (S2) until the door lowers to the desired closed position
6. Press LEARN button (S3). Unit will beep twice to confirm limit is set.
The door will travel between the limits once
7. Replace light cover

Limit setting is now complete

Set using handset (transmitter)

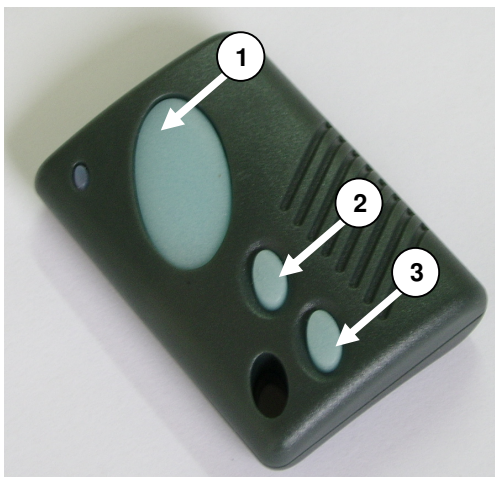

1. Press and hold buttons 1 & 3 simultaneously. Hold for 3 seconds until power head beeps 3 times
2. Raise the door to the open position using press and hold button 2. To adjust this position use buttons 2 & 3 (UP & DOWN)
3. Press button 1 to confirm this position. Unit will beep twice to confirm the top position is set.
4. Lower the door to the closed position using press and hold button 3, adjust using buttons 2 & 3 (UP & DOWN)
5. Press button 1 to set this position. Unit will beep twice to confirm the closed position is set.
6. The door will travel between the limits once

Limit setting is now complete



Opening doors around the world
©GLIDEROL GARAGE DOORS PTY. LTD