

Duplicate Coding Instructions

1. Press and hold the top two buttons on the new remote at the same time and do not let go (these will either be an unlock/lock symbol, numbers 1&2 or an up and down arrow). After a few seconds the LED will flash and then go out.
2. While still holding the first button (lock, UP or button 1) release the second button only (unlock, down or number 2) and then press it 3 times. The LED light will flash repeatedly.
3. Release all buttons.
4. Test: press and immediately release any button on the remote. If the above steps have been successful, the LED should not work when you press any button.
5. Place both your new remote and original remote together. You may need to try different positions, head to head, back to back ect.
6. Press and hold one button on your new remote you wish to operate your door. The LED will flash and then go out to indicate that your duplicator remote is in the "learn-code" mode. Do not release this button.
7. Press and hold the button that operates your door on your original remote – this will send out the signal for your new remote to learn. When you see the LED light on your new remote start flashing constantly – then coding has been successful.
8. Release all the buttons, and then test your new remote to make sure that it is working.

How to Reset The Remote

Press and hold the bottom two buttons on your new remote for 5 seconds until it begins to flash constantly.

www.remotepro.com.au

SW030
Meaco