

# INSTRUCTIONS FOR RCV-30 RECEIVERS

## 1. WIRING

The RCV-30 is suitable for connection to 6-24 VDC/ VAC

Brown	Input voltage (positive +)
Blue	Input voltage (negative -)
Black	Relay Normally Closed
Gray	Relay Normally Open
White	Relay Common.

## 2. SETTING TRANSMITTERS CODES

The receiver can learn up to 6 different transmitters.

2.1 Press the code button -release it once the led illuminates.


2.2 Press one button of the transmitter (which ever one you want to control the door) for about 1 seconds led will switch off. Release the button for 1 seconds and press again for 1seconds led will begin to flash. When the LED stops flashing the coding sequence is complete.

## 3. DELETING CODES


Press the code button for 5 seconds. When led switches off all of the stored codes are deleted.

## 4. WIRING TO MARANTEC AND LIFETERMASTER OPENER

### A. Marantec

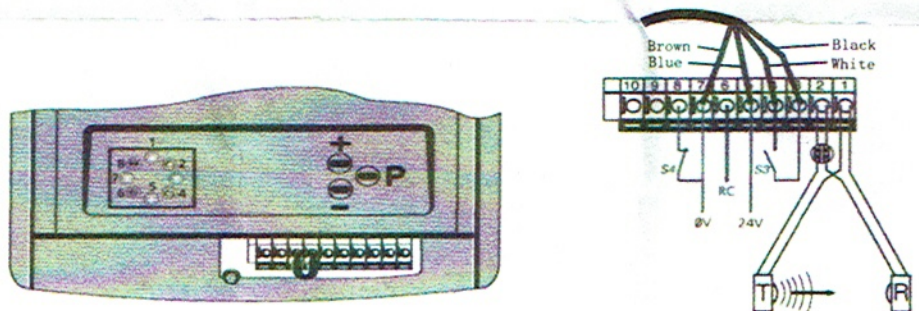

### B. Liftermaster

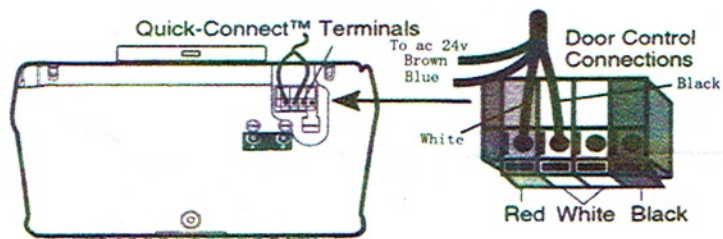

### C. Liftermaster

