

# User Manual for External Receiver

**Characters of ET-RCV1:** a small receiver for different common-used remote control; a easy handled receiver; a good quality receiver.

## Mail functions:

1. Can memorize 30 remote controls(if you add the 31<sup>st</sup> which will replace the first one.)
2. Work voltage: DC 12V-24V; AC 9V-18V
3. Work current: max. 50mA
4. Work frequency: 433.92MHz
5. Coding instructions: press the code button until seeing the red flash light, then release the code button; press one button of the transmitter twice until the flash light turns off, while this means you have finished one button coding;follow the same way to code other remote control.
6. Instruction of deleting coding:press and hold the code button till seeing the red flash light, when the light turns off you have already deleted all the coding.

## The connecting instruction is as below:

the three relays are separately connected to the first, second and fourth button of the remote control.

