



Centsys Nova Programming by remote only.

### **Deleting Remote Buttons.**

With an active working remote do the following.

- **Hold an active working remote button** down and don't let go.
- Then first it will flash the light for 10 seconds till you hear 1 BEEP (Don't let go of the button)
- Then 10 seconds later you will hear 2 Beeps' (Then let the button go)
- **Then hold in the Button you want to delete** any you will hear 1 Beep straight away (Don't let go of the button)
- Then after another 3 seconds you will hear 3 Beep's (Don't let the button go)
- Then after a total of 10 seconds you will hear 1 Beep
- Then let the button go and you will hear 3 Beep's straight away then let the button go (Then its deleted)
- Then wait 10 seconds and you will hear 1 long Beep and the receiver has gone back into normal mode.

Adding remotes using a working remote (NOT RECOMMENDED AS ANYONE NEAR BY CAN ACCIDENTLY BE PROGRAMMED I RECOMMEND ADDING BUTTONS USING A SCREWDRIVER AS CONTACT LIKE NORMAL)

Adding as follows if you do.

- With a working remote hold down the button that activates the receiver for 10 seconds till you hear 1 long beep. (Then let the button go)
- Then press the new button you want to use on the new remote for 3 seconds till you hear 2 Beep's (Then let the button go)
- Then wait 10 seconds till you hear a Beep and its programmed.