

Smart Lifter Nano Roller Door



Coding Transmitters

Note: The button you choose (1-4) for the first TX you code will be the same button for all subsequent transmitters. Up to twenty TXs can be stored into memory. If more than twenty are stored the system will disregard any attempts to code new TXs.

1 Press the CODE button for 2 seconds the display will show Code Learn (Fig. 13).

2 Choose which transmitter button will operate the door and press that button twice.

The first press will allocate a number to the remote and the display will show Remote XX (Fig. 14), on the second press the display will show CODE SET (Fig. 15). The transmitter has now been coded and the security code stored in the memory on board. Test the transmitter - the opener will beep to confirm.

Repeat the above steps to code additional transmitters.

REMOTE TRANSMITTER CODING

It is possible to code new transmitters via an already coded remote without being in contact with the control panel. This is useful if more than one device is operated by the transmitter. This also takes the guess work out of button allocation as this is done automatically.

1 Ensure Hands Free Learning is enabled (page 14).

2 Press TX BUTTON 3 + 4 together for 2 seconds. The opener will beep and light will flash once to signal Code Learn Mode.

3 Press any button on new transmitter twice (Fig. 16).

The opener will beep and light will flash twice to confirm code learned. Test new transmitter.

DELETING ONE TRANSMITTER

You can delete one specific transmitter without clearing the entire memory of the opener or having the transmitter on hand. This is useful if the transmitter is lost or stolen and the transmitters reference number is known.

1 Press and hold the CODE button for 5 seconds.

2 The display will show Del Remote XX (Fig. 17).

3 Press MODE button to scroll to required transmitter number.

4 Press CODE for 3 secs to delete.

DELETING ALL TRANSMITTERS

1 Press and hold the CODE button for 5 seconds.

2 Press MODE button to scroll through until the display shows Del Remote ALL.

3 Press CODE for 3 secs to delete.

ACTIVATING VACATION MODE

This is useful for locking out operation while away from the property for prolonged periods.

1 Press and hold the MENU button for 10 seconds.

2 If the door is open it will allow a final close cycle only and remain closed until vacation mode is disabled.

DISABLING VACATION MODE

1 Press and hold the MENU button for 10 secs or press transmitter buttons 1 + 2 together for 10 secs