



- **IMPORTANT-** Before programming the door disengage the trolley and run the door up and down manually to ensure that it runs smoothly and is correctly balanced.
- The door must be in the CLOSED position with the trolley engaged before proceeding.
- Express programming must be carried out to finalise installation and after every reset.
- Carry out steps 1 to 3 consecutively.

### STEP 1. Programming the OPEN door position

	The opener must be switched on		Solid ON icon displayed
	Hold the P button for 3 to 10 seconds		Counter will flash
	Drive the door to the desired OPEN position The trolley should be 5-10mm from the stop block <i>The - and + buttons can be used for fine tuning</i>		OPEN icon will flash
	Press and release the P button to save the OPEN position		CLOSE icon will flash

### STEP 2. Programming the CLOSED door position

	Drive the door to the desired CLOSED position <i>The + and - buttons can be used for fine tuning</i>		CLOSE icon will flash
	Press and release the P button to save the CLOSED position		WIFI icon will flash

### STEP 3. Programming the MASTER hand transmitter

	Press the transmitter button		Solid WIFI icon displayed
	Release the transmitter button		WIFI icon will flash
	Press and release the P button to save and end express programming		Solid ON icon displayed

- ❖ Only one remote control transmitter can be programmed during express programming. Refer to *Handset Coding Instructions* for programming additional transmitters.
- ❖ Door needs to run through four (4) full cycles to learn the open position.