

Resetting Operator System

Marantec Comfort 270/280/380 Openers



This procedure is used to reset various functions back to the factory settings. If the control unit is reset, all the required individual settings must be programmed again.

Reset Operator System

	The opener must be switched on		Solid ON icon displayed																
	Hold the P button for at least 10 seconds		Counter flashes & menu displayed																
	Select Level 1 using the + and - buttons <i>This Level is for Basic functions</i>		Level value displayed																
	Press and release the P button to confirm the level		Menu & Parameter value displayed																
	Select Menu 8 using the + and - buttons <i>This is the Reset Menu</i>		Parameter value displayed																
	Press and release the P button to confirm the menu		Parameter value will flash																
 	Select the Parameter required as per the table below: <table><tr><td>Parameter</td><td>Function</td></tr><tr><td>1</td><td>No reset</td></tr><tr><td>2</td><td>Reset control unit (any connected modules inc BUS modules & transmitters must be reset separately)</td></tr><tr><td>3</td><td>Reset transmitters (codes deleted)</td></tr><tr><td>4</td><td>Reset automatic closer timer</td></tr><tr><td>5</td><td>Reset special operator functions (except door limits and transmitters)</td></tr><tr><td>6</td><td>Reset safety functions (PE beams, hold circuit)</td></tr><tr><td>7</td><td>Reset BUS modules (connected BUS modules will need re-programming)</td></tr></table> (Example used- Reset transmitters)	Parameter	Function	1	No reset	2	Reset control unit (any connected modules inc BUS modules & transmitters must be reset separately)	3	Reset transmitters (codes deleted)	4	Reset automatic closer timer	5	Reset special operator functions (except door limits and transmitters)	6	Reset safety functions (PE beams, hold circuit)	7	Reset BUS modules (connected BUS modules will need re-programming)		Parameter value will flash
Parameter	Function																		
1	No reset																		
2	Reset control unit (any connected modules inc BUS modules & transmitters must be reset separately)																		
3	Reset transmitters (codes deleted)																		
4	Reset automatic closer timer																		
5	Reset special operator functions (except door limits and transmitters)																		
6	Reset safety functions (PE beams, hold circuit)																		
7	Reset BUS modules (connected BUS modules will need re-programming)																		
	Press and release the P button to confirm the parameter Wait 3 seconds, light will flash and function will reset		All icons will flash on & off																
	If Menu is still displayed hold the P button for at least 5 seconds to exit <i>Programming complete</i>		Solid ON icon displayed																